

technicolor



Technical Document

Syntax of TB30S Configuration File

TB30S_Config File Syntax_V0014

Dec 30, 2011



TABLE OF CONTENTS

1	Configuration File Syntax.....	1
1.1	Configuration File Format	1
1.2.	Configuration Parameters and Syntax	1
1.2.1.	IPP	1
1.2.2.	NET	6
1.2.3.	SIP	8
1.2.4.	CWMP	29
1.2.5.	SNMP	31
1.2.6.	SYS.....	32
1.2.7.	Auto Provision.....	40
1.2.8.	QoS	41
1.2.9.	NTP.....	41
1.2.10.	PPPoE	41
1.2.11.	STUN.....	42
1.2.12.	UPnP	42
1.2.13.	Customer.....	42
	Appendix A: Option Menu Setting	43
	Appendix B: Time Zone List	44
	Appendix C: Language List.....	46
	Appendix D: Country Tone List.....	46

1 Configuration File Syntax

This document describes the configuration file syntax for versions TB30S, unless superseded by a new document.

1.1 Configuration File Format

The purpose for configuration file is to allow service provider configure ST2030 and st2022 remotely. This file must include the title, say [sip] or [autoprovision], and associated items. Each item is composed of parameter and value. Below are the examples for SIP.

Note:

- The parameter marked as **bold-italic**(**config_sn** in [sys] section) is required for mac-specific configuration file, and must not be in common configuration file.

Example:

SIP:

```
[sip]
TEL01Use=1
RegisterServerMP1=10.1.25.105
ProxyServerMP1=10.1.25.105
ServiceDomainMP1=10.1.25.105

[autoprovision]
autoprovisionTimeDays=0
autoprovisionstarttime=00:00
autoprovisionTimeSpan=0...
...
```

- There are two key words for every string type of parameter in common and mac-specific configuration file: <empty> and <default>.

Example:

```
CWMPACSUser=<default> /* will set parameter CWMPACSUser to
                        default value */
CWMPACSUser=<empty> /* will set parameter CWMPACSUser to
                     empty value */
```

1.2. Configuration Parameters and Syntax

1.2.1. IPP

[ipp]				
File System Parameter	Explanation	Syntax	Value	CLI
AlarmFlag	For MMI only	N/A	0	N/A

[ipp]				
File System Parameter	Explanation	Syntax	Value	CLI
AlarmTime(Hour)	For MMI only	N/A	0	N/A
AlarmTime(Minute)	For MMI only	N/A	0	N/A
AlarmType	For MMI only	N/A	1	N/A
AutoAnsMode	For auto answer headset or handsfree mode	0: Handsfree 1: Headset	0	lcdui show autoans_mode lcdui set autoans_mode
AutoAnsTimer	Automatic answer	0:deactivate 0 ~ 60 sec	0	N/A
Autocall	Auto call	0:disable 1:enable	0	sys show autocall_flag
AutocallNumber	Auto call destination	Tel or URI		sys show autocall_nbr
AutoLockTimeout	Phone will lock after time out	0:deactivate 30 ~ 6000 sec	0	lcdui set AutoLockTmrout
AutoRejectTimer	Automatically reject incoming call if the user does not pickup the phone	0:deactivate 0 ~ 180 sec	0	N/A
AutoStopTimer	Stop placing outgoing call if callee does not answer	0:deactivate 0 ~ 180 sec	0	N/A
AutoHangUpTimer	Automatically goes back to idle mode after this timer	0:deactivate 0 ~ 180 sec	3	N/A
auto_cb	Enable/Disable Call Back feaute	0:disable 1:enable	1	lcdui show auto_cb
BLBlinkMode	To indicate LCD backlight blinks for which event	0: empty 1: MWI 2: Incoming call 4: Miss calls 7:All	0	lcdui set BLBlinkMode
BIBlinkTime	To decide LCD backlight blinking timeout	0~3600s	0	lcdui set BIBlinkTime
CaLogPrefix	Prefix for received and missed call log	1~4		N/A
Check_phonebook_domain_name	Use or ignore domain to decide if a uri belongs to the phonebook	0: ignore domain 1: use domain	1	
DateFlag	For MMI only	N/A	0	N/A
DateFormat	For MMI only	N/A	DD_MM_YY	N/A
DialSubscriberFlag	For MMI only	N/A	0	N/A
DialSubscriberHour	For MMI only	N/A	1	N/A
DialSubscriberMin	For MMI only	N/A	0	N/A
DialSubscriberTelNbr	For MMI only	N/A		N/A

[ipp]				
File System Parameter	Explanation	Syntax	Value	CLI
Disable_call_progress	Enable /Disable the call progress "Ringing" on screen	1: doesn't display the call progress on screen 0: display the call progress on screen	0	lcdui set hide_cp
DirectDND	For direct DND access	0: Manual select 1: Direct DND access	0	lcdui set DirectDND
DoNotDisturb_AbHour	Do Not Disturb for absolute type	0~23	0	N/A
DoNotDisturb_AbMin	Do Not Disturb for absolute type	0~59	0	N/A
DoNotDisturb_Duration	Do Not Disturb for relative type	0~65535 min	0	N/A
DoNotDisturb_Hour	Do Not Disturb for relative type	0~23	0	N/A
DoNotDisturb_Mday	Do Not Disturb for relative type	1~31	1	N/A
DoNotDisturb_Min	Do Not Disturb for relative type	0~59	0	N/A
DoNotDisturb_Month	Do Not Disturb for relative type	0~11	0	N/A
DoNotDisturb_Type	Type of DND function	1:Relative 2:Absloute	0	N/A
DoNotDisturb_Year	Do Not Disturb for relative type	100~199 (2000~2099)	0	N/A
Suppress-DomainName-Flag	Hide Domain Name when the phone is received	0:disable 1:enable	1	N/A
HideMissedCall	Hide missed call display	0:disable 1:enable	0	sys show hmcd_flag
Hide_Phone_Number_Display	Hide/show phone number on idle screen	0: show phone number 1: hide phone number	0	
IncomingLock	Lock incoming call	0:disable 1:enable	0	lcdui set incomingLock
IPP_gains_handset	For MMI only	N/A	0	N/A
IPP_gains_headset	For MMI only	N/A	0	N/A
IPP_gains_handsfree	For MMI only	N/A	0	N/A
IPP_gains_GL_handset	For MMI only	N/A	0	N/A
IPP_gains_GL_headset	For MMI only	N/A	0	N/A
IPP_gains_speaker	For MMI only	N/A	0	N/A
Key_Echo	For MMI only	N/A	1	N/A
LCDvoltLevel	Adjustable	35,41,45, 51	45	N/A

[ipp]				
File System Parameter	Explanation	Syntax	Value	CLI
	contrast			
LanguageType	Language display in English		0	N/A
LCDBackLigthSaving	Disable/Enable back lighting saving mode	0:disable 1:enable	1	lcdui set lcd_bl_flag
LCDBacklighthSavingTiming	Backlight is turn off after the timeout	0~3600	30	lcdui set lcd_bl_time
LocalMusicOnHold	Music on hold	0:Server 1:Local	1	sip set music_srv_flag <0:Local/ 1:By server>
LocalPB	To decide if allow to access local phone book via MMI	0: not allow 1: allow	1	lcdui set LocalPB
LogoDisplay	A flag to decide if display logo when standby	0:disable 1:enable	0	lcdui set LogoDisplay
LogoTimeOut	The timeout for display logo	10~255s	30	lcdui set LogoTimeOut
ManualLog	Enable/Disable login-logout feature	0:disable 1:enable	1	sys show manual_log
NeverHangup	To decide if allow user to hangup for only incoming call	0: disable 1: enable	0	lcdui set NeverHangup
OptionVisible	Provide option menu selection	Hex number(0000~3fff)	0x3FFF	lcdui show option_tbl lcdui set option_tbl [Hex number(0000~3fff)]
PasswordFlag	Enable/disable PIN usage for keypad lock	0: PIN not needed 1: PIN used	0	N/A
PasswordString	Personal code for Phone Lock	4 digits	0000	N/A
Pickup1	To decide which type to do pickup	Pickup_Name Pickup_Method Pickup_Num	0 x	lcdui set Pickup1 <content: max 63 chars or null>
Pickup2	To decide which type to do pickup	Pickup_Name Pickup_Method Pickup_Num	0 x	lcdui set Pickup2 <content: max 63 chars or null>
Pickup3	To decide which type to do pickup	Pickup_Name Pickup_Method Pickup_Num	0 x	lcdui set Pickup3 <content: max 63 chars or null>
Pickup4	To decide which type to do pickup	Pickup_Name Pickup_Method Pickup_Num	0 x	lcdui set Pickup4 <content: max 63 chars or null>
PhoneLock	Phone Lock	1:activate 0:deactivate	0	N/A

[ipp]				
File System Parameter	Explanation	Syntax	Value	CLI
Pick_up_call	Enable/disable Call Pickup softkey	0: disable softkey 1: enable softkey	1	
PhoneLockMode	To decide phone lock mode	0:current phone lock behavior 1: key locked	0	lcdui set phonelockmode
PolyMelody	To decide if the downloaded poly ringer will replace the default ringer	0: use the default ringer 1: use the downloaded poly ringer	0	lcdui set PolyMelody
Ringer_default_vol	Volume at which phone will lock if enabled	0~9	4	
Ringer_lock	Allow/Prohibit users to change ringer volume	0: Lock Disabled 1: Lock enabled	0	
RingToneMP1	Profile Ring tone-1	0 ~ 6	0	sys show ring_toneMP 1
RingToneMP2	Profile Ring tone-2	0 ~ 6	0	sys show ring_toneMP 2
RingToneMP3	Profile Ring tone-3	0 ~ 6	0	sys show ring_toneMP 3
RingToneMP4	Profile Ring tone-4	0 ~ 6	0	sys show ring_toneMP 4
RestoreLanguageType	To decide which 3 language tables will be replaced by a new uploaded language table	x x x(x:0~8)		lcdui show restore_lang
rtptimeout	Phone will automatically released if the phone does not receive any RTP flow	0~120(s)	0	lcdui set rtptimeout
Silence200	To decide if send audio before receiving a final 200OK for a call	0: Be able to speak to the server 1: Silence before the 200 Ok	1	lcdui set Silence200
Shortcut_one	For MMI only	N/A	0	N/A
Shortcut_two	For MMI only	N/A	0	N/A
SupervisorListening	Supervisor listening on handset while operator on headset	0: disable 1: enable	0	lcdui show SupListening
TimeFlag	Time format setting	0:12H format 1:24H format	0	N/A

[ipp]				
File System Parameter	Explanation	Syntax	Value	CLI
Transfer_to_voice_mail	Enable/disable Tr-to-Vmail softkey	0: disable softkey 1: enable softkey	1	
TransfOnRingFlag	to decide the [Transf] softkey on ringing shown in MMI with/without respect to the call forward bit in parameter "OptionVisible".	0:disable 1:enable	0	lcdui show transf_on_ring
TTime	For speed dial, Phone will automatically send DTMF till timeout after remote user answer the call	0~10(s)	1	lcdui set TTime
U_Pickup	Enable/disable the feature for universal pickup	0:disable 1:enable	0	lcdui set U_Pickup

1.2.2. NET

[net]				
File System Parameter	Explanation	Syntax	Value	CLI
DNSSrv1	Primary DNS address	IPv4 format	0.0.0.0	net set dnsip pri <IP>
DNSSrv2	Secondary DNS address	IPv4 format	0.0.0.0	net set dnsip sec <IP>
DNSFLG	DNS Server setting from flash or network	0(From flash) 1(From network)	1	net show dnsmode net set dnsmode [0(From flash) /1(From network)]
DNSFB	Setting the DNS mode	0: Original mode(always query the first DNS) 1:Circular method of querying the DNS	0	net show fbtimer
DSCPflag	Enable and disable Diffserv function	0:Disable 1:Enable	0	net show dscp
DHCP_Opt60	Enable and disable option 60 in DHCP Discover	0:Off 1:On	1	net set DHCP_Opt60

[net]				
File System Parameter	Explanation	Syntax	Value	CLI
ESWITCH_LAN	Configure Ethernet connection for LAN port	1:Auto 2:100/Half 3:100/Full 4:10/Half 5:10/Full	1	eswitch set <Port> <Config_value> Port: 1 => LAN Port: 2 => PC Config_value: 1 => auto-negotiation Config_value: 2 => 100M, Half-duplex Config_value: 3 => 100M, Full-duplex Config_value: 4 => 10M, Half-duplex Config_value: 5 => 10M, Full-duplex
ESWITCH_PC	Configure Ethernet connection for PC port	1:Auto 2:100/Half 3:100/Full 4:10/Half 5:10/Full	1	eswitch set <Port> <Config_value> Port: 1 => LAN Port: 2 => PC
Gateway	Wan default gateway	IPv4 format	0.0.0.0	net show gateway
HttpsType	To indicate the https type for APS	0:One way authentication 1:Double authentication	0	net set https_type
WebsecurityType	To indicate the web security type	0: default use http 1: https without authentication 2: https with authentication	0	net set web_security
ipwan	Wan IP address	IPv4 format	10.1.24.88	net show ipwan
IpDFflag	Don't fragment	0: disable, 1:enable	0	net show ipdf net set ipdf [0(Disable) / 1(Enable)]
IldpXFlag	Disable/Enable LLDP function	0:disable 1:enable	0	lldp set flag
IldpTxPeriod	The period time for sending Ildp	0~255 seconds	30	lldp set tx_period
IldpTTL	The TTL value of LLDP	0~65535 seconds	120	lldp set TTL
IldpPortDesc	The Port Description of LLDP	Max length: 255		lldp set PortDesc
IldpSysName	The System name of LLDP	Max length: 255		lldp set SysName

[net]				
File System Parameter	Explanation	Syntax	Value	CLI
IldpSysDesc	The System Description of LLDP	Max length: 255		Ildp set SysDesc
IldpSysCap	The System Capabilities of LLDP	Capvalue: 1~65535 enabledCap: 1~65535		Ildp set SysCap <capvalue> <enabledCap>
IldpChassisID	Chassis ID subtype	1~7	4	Ildp set ChassisID
IldpPortID	Port ID subtype	1~7	4	Ildp set PortID
IldpXMediaCap	LLDP-MED Capabilities	Value: 1~65535 DeviceType: 0~4		Ildp set XMediaCap <value> <DeviceType>
IldpXNetPolicy	Network Policy	1~8	1	Ildp set XNetworkPolicy
IldpXEndpLocIdenti	LLDP-MED Location Identification	0	0	Ildp set XEndpLocIdenti
IldpXAssetID	Inventory - Asset ID	Max length: 32		Ildp set XAssetID
MaskWan	Subnet Mask	IPv4 format	0.0.0.0	net show maskwan
PersistentVLANfromDHCP	Make VLAN setting provided via DHCP survive reboot or not	0: not surviving reboot 1: persistent	0	N/A
TelnetTime	For telnet timeout	0~240 seconds	240	net show telt net set telt (0~240 seconds)
TelnetPort	Reserved for future		23	
TelnetSrv	Enable and disable telnet service	0: Off 1: On	0	net show telnet_srv
VLAN	Enable and disable VLAN function	0: Off 1: Voice 2: Voice and Data	0	net show vlan
WanModFlag	Set up networking with Fixed IP, DHCP or PPPoE	0: Fixed IP 1: DHCP 2: PPPoE	1	net show wan_mode

1.2.3. SIP

[sip]

File System Parameter	Explanation	Syntax	Value	CLI
ACD	Enable/Disable Sylanro ACD	0: disable 1: enable	0	
ACRResp	To decide which code to response for ACR	0: 403 1: 433 2: 603	2	sip set acr_resp
Accept18Xwithout100rel	To decide if accept 18x+SDP even without 100rel.	0: disable 1: enable	0	sip set acceptwithoutrel
as-feature-event	Enable/Disable Broadsoft the package as-feature-event feature	0: disable 1: enable	0	sip set as_feature_evt
AuthMessageServer	Default value 0.0.0.0 means the phone will accept all the messages coming from everywhere. If not, only Messages coming from the server shall be accepted.	IPv4 format or a domain name, max 127 chars	0.0.0.0	sip set auth_msg_srv
AuthNotifyCheckSync	Default value 0.0.0.0 means the phone will accept NOTIFY-checksync requests coming from everywhere. If other value, only those coming from the specified server will be accepted, and the rest ignored.	IPv4 format or a domain name, max 127 chars	0.0.0.0	sip set auth_notify_sync_srv
Answer_180_100rel	To decide if 180 with sdp require 100rel when INVITE with sdp require 100rel	0: without sdp 1: with sdp	0	sip set 180_100rel_answer
B_suppress_evt	A flag to decide if suppress some subscribe event as BT required	0: not suppress 1: suppress	0	sip show B_suppress_evt
BLFcheckID	To decide if check the caller ID on BLF	0: not check the caller ID 1: check the	0	sip set BLFcheckID

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
		caller ID		
CallBlockFlg	local/starcode flag for Call Blocking	local sc	local	sip show CallBlockFlg
CallBlockAllowSC	a field for Call Blocking Allowed starcode	Max:32		sip show CallBlockAllowSC
CallBlockRejectSC	a field for Call Blocking Rejected starcode	Max:32		sip show CallBlockRejectSC
CallBlockOFFSC	a field for Call Blocking OFF starcode	Max:32		sip show CallBlockOFFSC
CallBlockType	Call blocking	0:disable 1:allowed 2:reject	0	sip show sw call_block
CalledDisplayPrior	Set priorities for outgoing calls identity display source	1 ~3 for each header type, 1 highest priority and 3 lowest. dialed(pr)passerted(pr)remoteparty(pr)	dialed(1)passerted(2)remoteparty(3)	sip set called_display_pri <dialed pr> <passerted pr> <remotepart pr> Example: sip set called_display_pri 1 2 3
CallFwdFlg	local/starcode flag for call forward	local sc	local	sip show CallFwdFlg
CallFwdOffSC	a field for call forward OFF starcode	Max:32		sip show CallFwdOffSC
CallFwdAlwaysSC	a field for call forward Always starcode	Max:32		sip show CallFwdAlwaysSC
CallFwdBusySC	a field for call forward Busy starcode	Max:32		sip show CallFwdBusySC
CallFwdNoAnswerSC	a field for call forward No Answer starcode	Max:32		sip show CallFwdNoAnswerSC
call_hold_method	To decide call hold method as sendonly/inactive	0: sendonly 1: inactive	0	sip show call_hold_method
CFUOnSV	To activate CFU for supervised line	Max:32		sip show CallFwdOnSV

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
CFUOffSV	To deactivate CFU for supervised line	Max:32		sip show CallFwdOffSV
ComverseParkCode	Star codes for Comverse park feature	L-Park L-UnPark Q-Park Q-UnPark	*61# *62X# *63# *64X#	N/A
ComverseParkFlag	Enable/disable Comverse park feature	0: disable 1: enable	0	sip set comverseparkflg
CallJoin	To keep B and C talking after the A on hook when do local conference	0: disable 1: enable	0	sip set CallJoin
RetPrevTransNotAllow	When Transfer Not Allowed is received, if phone should return to previous state	0: disable 1: enable	0	sip set RtnTransfPrevflg
CallFwdPlayAnn	To decide if play an Announcement when activate/deactivate CFU	0: disable 1: enable	0	sip set CFPlayAnn
DNDPlayAnn	To decide if play an Announcement when activate/deactivate DND	0: disable 1: enable	0	sip set DNDPlayAnn
TrVoiceMailPlayAnn	To decide if play an Announcement when activate/deactivate Transfer to VM	0: disable 1: enable	0	sip set TrVMPlayAnn
CallBlockPlayAnn	To decide if play an Announcement when activate/deactivate Call Block	0: disable 1: enable	0	sip set CBlockPlayAnn
ClirPlayAnn	To decide if play an Announcement when activate/deactivate CLIR	0: disable 1: enable	0	sip set ClirPlayAnn
CallWaitingPlayAnn	To decide if play an Announcement	0: disable 1: enable	0	sip set CWPlayAnn

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
	when activate/deactivate Call Waiting			
SFPlayAnn	To decide if play an Announcement when activate/deactivate Secretarial Filtering	0: disable 1: enable	0	sip set SFPlayAnn
HgPlayAnn	To decide if play an Announcement when activate/deactivate Hunting Group	0: disable 1: enable	0	sip set HgPlayAnn
ContactinBye	"Contact header" information will be shown in BYE message	0: disable 1: enable	0	sip set ContactinBye
CallParkType	Park/Retrieve type selection	0: REFER to server, Retrieve via SUBSC/INV 1: REFER to UA, Retrieve via INVITE 2: Sylantro	0	
CallParkFlg	local/starcode flag for Call Park	local sc	local	sip show CallParkFlg
CallParkSC	a field for Call Park starcode	Max:32		sip show CallParkSC
CallRetreiveSC	a field for Call Retrieve starcode	Max:32		sip show CallRetreiveSC
CallPkupFlg	local/starcode flag for call pick up	local sc	local	sip show CallPkupFlg
CallPkupSC	a field for call pick up starcode	Max:32		sip show CallPkupSC
CallWaitingFlg	local/starcode flag for Call Waiting	local sc	local	sip show CallWaitingFlg
CallWaitingOnSC	a field for Call Waiting ON starcode	Max:32		sip show CallWaitingOnSC
CallWaitingOffSC	a field for Call Waiting OFF starcode	Max:32		sip show CallWaitingOffSC
CLIPDisplayPrior	Set priorities for incoming call identity (CLIP)	1 ~4 for each header type, 1 highest priority	ppreferred(1)passerted(2)remote	sip set clip_display_pri <ppref pr> <pass

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
	display source	and 4 lowest. pprefered(pr)pa sserted(pr)remot eparty(pr)from(p r)	party(3)from(4)	pri> <rem pri> <from pr> Example: sip set clip_display_pri 1 2 3 4
ClirFlg	local/starcode flag for Call Privacy	local sc	local	sip show ClirFlg
ClirOnSC	a field for Call Privacy On starcode	Max:32		sip show ClirOnSC
ClirOffSC	a field for Privacy OFF starcode	Max:32		sip show ClirOffSC
CF_Address1	Telephone number that you would like to forward to in any condition	Max:24 chars		sip show CF_Addr
CFNA_Time1	No Answer time before Call Forward	0 ~ 32	30	sip show CFNA_time
CF_domain	Domain Name of call forward	Max: 127		sip show CF_Addr sip set CF_Addr
ConferenceFactoryURI	The conference factory URI	Max: 191	conf	sip show conf_uri
ConferenceMode	Locally mixed conference or other	0: Local conference 1: Network Conf- GenBand 2: Centralized Conf-Sylantro	0	
ConnectReuseFlgMP1	Reuse connection created by server in TCP for primary server	0: disable 1: enable	0	sip show conn_reusemp 1
ConnectReuseFlgMP2	Reuse connection created by server in TCP for primary server of profile 2	0: disable 1: enable	0	sip show conn_reusemp 2
ConnectReuseFlgMP3	Reuse connection created by server in TCP for primary server of profile 3	0: disable 1: enable	0	sip show conn_reusemp 3

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
ConnectReuseFlgMP4	Reuse connection created by server in TCP for primary server of profile 4	0: disable 1: enable	0	sip show conn_reusemp 4
ConnectReuseFlgBK1	Reuse connection created by server in TCP for backup server	0: disable 1: enable	0	sip show conn_reusebk 1
ConnectReuseFlgBK2	Reuse connection created by server in TCP for backup server of profile 2	0: disable 1: enable	0	sip show conn_reusebk 2
ConnectReuseFlgBK3	Reuse connection created by server in TCP for backup server of profile 3	0: disable 1: enable	0	sip show conn_reusebk 3
ConnectReuseFlgBK4	Reuse connection created by server in TCP for backup server of profile 4	0: disable 1: enable	0	sip show conn_reusebk 4
DisplayNumFlag1	To indicate if DisplayNum1 will replace tel_number1 displaying on LCD	0: disable 1: enable	0	sip show dispnum_flag 1
DisplayNumFlag2	To indicate if DisplayNum2 will replace tel_number2 displaying on LCD	0: disable 1: enable	0	sip show dispnum_flag 2
DisplayNumFlag3	To indicate if DisplayNum3 will replace tel_number3 displaying on LCD	0: disable 1: enable	0	sip show dispnum_flag 3
DisplayNumFlag4	To indicate if DisplayNum4 will replace tel_number4 displaying on LCD	0: disable 1: enable	0	sip show dispnum_flag 4

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
DisplayNum1	To affect the displayed tel_number1 on the screen	Max: 20		sip show dispnum_value 1
DisplayNum2	To affect the displayed tel_number2 on the screen	Max: 20		sip show dispnum_value 2
DisplayNum3	To affect the displayed tel_number3 on the screen	Max: 20		sip show dispnum_value 3
DisplayNum4	To affect the displayed tel_number4 on the screen	Max: 20		sip show dispnum_value 4
DNDFlg	local/starcode flag for DND	local sc	local	sip show DNDFlg
DNDOnSC	a field for DND ON starcode	Max:32		sip show DNDOnSC
DNDOffSC	a field for DND OFF starcode	Max:32		sip show DNDOffSC
DNDOnSV	To activate DND for supervised line	Max:32		sip show DNDOnSV
DNDOffSV	To deactivate DND for supervised line	Max:32		sip show DNDOffSV
DNDResp	DND Response only when user enabled Do Not Disturb	0:480 1:486 2:603	1	sip show dnd_resp
DisplayName1	Telephone name of profile 1	Max:20		sip show tel_name 1
DisplayName2	Telephone name of profile 2	Max:20		sip show tel_name 2
DisplayName3	Telephone name of profile 3	Max:20		sip show tel_name 3
DisplayName4	Telephone name of profile 4	Max:20		sip show tel_name 4
DisplayNameFlag1	Display caller name flag-1	0:disable, 1:enable	1	sip show tel_name_flag 1
DisplayNameFlag2	Display caller name flag-2	0:disable, 1:enable	0	sip show tel_name_flag 2
DisplayNameFlag3	Display caller name flag-3	0:disable, 1:enable	0	sip show tel_name_flag 3
DisplayNameFlag4	Display caller name flag-4	0:disable, 1:enable	0	sip show tel_name_flag 4
DiversionHeaderFlag	to activate /	0:disable,	0	sip show

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
	deactivate the feature of redirecting identity and name presentation	1:enable		diversion_header_flag
Earlymediatype	RTP policy for early media.	Earlymediatype=0 --> play RTP for early media, switch to local ringing generation if 180 (no sdp) is received. Earlymediatype=1 --> play RTP for early media, do not switch to local ringing if 180 (no sdp) is received, and still playing the incoming RTP pkg.	0	sip set early_media_type
EventEndRetransmit	RTP Event (DTMF) end packet will be retransmit 3 times with the period of the value.	0~100(x*10ms) 0: not retransmit	0	sip set 2833_EventEndRetransmit
ExpireTimeMP1	Primary SIP registration expire time of profile 1	60 ~ 200,000	3600	N/A
ExpireTimeMP2	Primary SIP registration expire time of profile 2	60 ~ 200,000	3600	N/A
ExpireTimeMP3	Primary SIP registration expire time of profile 3	60 ~ 200,000	3600	N/A
ExpireTimeMP4	Primary SIP registration expire time of profile 4	60 ~ 200,000	3600	N/A
ExpireTimeBK1	Backup SIP registration expire time of profile 1	60 ~ 200,000	3600	N/A

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
ExpireTimeBK2	Backup SIP registration expire time of profile 2	60 ~ 200,000	3600	N/A
ExpireTimeBK3	Backup SIP registration expire time of profile 3	60 ~ 200,000	3600	N/A
ExpireTimeBK4	Backup SIP registration expire time of profile 4	60 ~ 200,000	3600	N/A
NatKeepAliveDest	Destination of NAT keepalive OPTIONS messages	Sip uri, ip address or domain name, max 127 chars		sip set NatkeepaliveDest
NatKeepAliveTimer	Separation in seconds between two consecutive NAT keepalive OPTIONS messages	0 ~ 600	0 (Keepalive disabled)	sip set NatkeepaliveTimer
HGOnSC	a field for hunting group ON starcode	Max:32		sip show HuntingGroupOnSC
HGOffSC	a field for hunting group OFF starcode	Max:32		sip show HuntingGroupOffSC
HGOnSV	To activate hunting group for supervised line	Max:32		sip show HuntingGroupOnSV
HGOffSV	To deactivate hunting group for supervised line	Max:32		sip show HuntingGroupOffSV
Hold_bf_AttTrans	To decide if send hold before attend transfer	0: hold 1: not hold	0	sip set hold_bf_atttrans
ilbc_payload	The RTP payload for codec ILBC	96~127	116	N/A
ilbc133_payload	The RTP payload for codec ILBC 13.3	96~127	120	N/A
MissedCallSummary	Disable/Enable for subscribe missed-call-summary event	0:disable 1:enable	0	
OutBoundProxy0	Outbound Proxy Address			sip show outbnd_pxy_addr
OutBoundPort0	Outbound Proxy Port Number	1~65535	5060	sip show outbnd_pxy_port

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
OutBoundType	Outbound Proxy Type	0: disable 1: With Pre-Existing Route Set 2: Without Pre-Existing Route Set	0	sip show outbnd_type
offer_180_100rel	To decide if 180 will carry SDP when receiving a INVITE without SDP and with 100rel	0: with SDP 1: without SDP	0	sip show 180_100rel_offer
service_route	To decide if support the < Service_Route > header	0: not support 1:support	0	sip set service-route
auth_info	To decide if support the <authentication-info> header and the <proxy-authentication-info> header	0: not support 1:support	0	sip set auth-info
P_id_type	To decide which header will be in INVITE message for CLIR feature	0: P-Asserted-Identity 1: P-Preferred-Identity	0	sip set P_id_type
P-AssertedIDforCallee	Select Called Party presentation and Call log storage source: P-Ass-ID in 200-OK or dialed digits This variable has been overridden now by CalledDisplayP rior	0: Dialed digits are used 1: P-Asserted id in 200-OK is used	0	
ProfileName1	Profile name-1		Profile 1	sip show pro_name 1
ProfileName2	Profile name-2		Profile 2	sip show pro_name 2
ProfileName3	Profile name-3		Profile 3	sip show pro_name 3
ProfileName4	Profile name-4		Profile 4	sip show pro_name 4
PrivacyFlag1	Privacy	4:disable 5:enable	4	sip set privacy 1 <type> <on/off>

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
ProxyServerMP1	Primary proxy server address of profile 1	No limit		sip show pxy_srvmp 1
ProxyServerMP2	Primary proxy server address of profile 2	No limit		sip show pxy_srvmp 2
ProxyServerMP3	Primary proxy server address of profile 3	No limit		sip show pxy_srvmp 3
ProxyServerMP4	Primary proxy server address of profile 4	No limit		sip show pxy_srvmp 4
ProxyServerBK1	Backup proxy server address of profile 1	No limit		sip show pxy_srvbk 1
ProxyServerBK2	Backup proxy server address of profile 2	No limit		sip show pxy_srvbk 2
ProxyServerBK3	Backup proxy server address of profile 3	No limit		sip show pxy_srvbk 3
ProxyServerBK4	Backup proxy server address of profile 4	No limit		sip show pxy_srvbk 4
RegEventServer	Registration Event server address for future Login/logout feature			
Regid1	User name for SIP authentication-1	Max:31		sip show reg_id 1
Regid2	User name for SIP authentication-2	Max:31		sip show reg_id 2
Regid3	User name for SIP authentication-3	Max:31		sip show reg_id 3
Regid4	User name for SIP authentication-4	Max:31		sip show reg_id 4
regpwd1	Password for SIP authentication-1	Max:64		sip show reg_pwd 1
regpwd2	Password for SIP authentication-2	Max:64		sip show reg_pwd 2
regpwd3	Password for SIP authentication-3	Max:64		sip show reg_pwd 3
regpwd4	Password for SIP authentication-4	Max:64		sip show reg_pwd 4
RegisterServerMP1	Primary SIP server address of profile 1	FQDN / IPv4	10.1.24.22 2	sip show reg_srvmp 1

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
RegisterServerMP2	Primary SIP server address of profile 2	FQDN / IPv4		sip show reg_srvmp 2
RegisterServerMP3	Primary SIP server address of profile 3	FQDN / IPv4		sip show reg_srvmp 3
RegisterServerMP4	Primary SIP server address of profile 4	FQDN / IPv4		sip show reg_srvmp 4
RegisterServerBK1	Backup SIP server address of profile 1	FQDN / IPv4		sip show reg_srvbk 1
RegisterServerBK2	Backup SIP server address of profile 2	FQDN / IPv4		sip show reg_srvbk 2
RegisterServerBK3	Backup SIP server address of profile 3	FQDN / IPv4		sip show reg_srvbk 3
RegisterServerBK4	Backup SIP server address of profile 4	FQDN / IPv4		sip show reg_srvbk 4
RtpPort	RTP Port	39152 ~ 65000	41000	sip show rtp_port
RegReflashMod	To decide if support the MIPC register method	0:disable 1:enable	0	Sip set reg_reflash_mode
RejectCode	To decide which code to response when reject a call	0: 480 1: 486	0	sip set reject_code
ReTransTimer1	T1 timer(ms)		500	N/A
ReTransTimer2	T2 timer(ms)		4	N/A
RegEventServer	User part of Registration event server for Login/Logout feature			
RegisterFrequencyMP1	Primary SIP server Register re-attempt frequency of profile 1		600	sip show reg_freqmp 1
RegisterFrequencyMP2	Primary SIP server Register re-attempt frequency of profile 2		600	sip show reg_freqmp 2
RegisterFrequencyMP3	Primary SIP server Register re-attempt frequency of profile 3		600	sip show reg_freqmp 3
RegisterFrequencyMP4	Primary SIP server Register		600	sip show reg_freqmp 4

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
	re-attempt frequency of profile 4			
RegisterFrequencyBK1	Backup SIP server Register re-attempt frequency of profile 1		600	sip show reg_freqbk 1
RegisterFrequencyBK2	Backup SIP server Register re-attempt frequency of profile 2		600	sip show reg_freqbk 2
RegisterFrequencyBK3	Backup SIP server Register re-attempt frequency of profile 3		600	sip show reg_freqbk 3
RegisterFrequencyBK4	Backup SIP server Register re-attempt frequency of profile 4		600	sip show reg_freqbk 4
REQ_URI_with_port	Add port in request URI or not	0:disable 1:enable	1	sip show REQ_URI_with_port
RFC2833	RFC2833's flag	0:disable 1:enable	1	sip show 2833flag
RFC2833_rtp_pltype	RFC2833's RTP payload type	96~127	96	sip show 2833_rtp_pltype
RFC3262	RFC3262's flag	0:disable 1:enable	0	sip show 3262flag
RandomCSeqFlag	Random CSeq for INVITE	0:disable 1:enable	0	sip show random_cseq_flag
RandomRTPPortFlag	Random RTP port	0:disable 1:enable	0	sip show random_rtp_port
SCAMainLinePrivate	To indicate the Main Line is Private or Share	0:share 1:private	0	sip show SCAMainLinePrivate
ServiceDomainMP1	Primary SIP Service domain of profile 1	FQDN / IPv4		sip show domainmp 1
ServiceDomainMP2	Primary SIP Service domain of profile 2	FQDN / IPv4		sip show domainmp 2
ServiceDomainMP3	Primary SIP Service domain of profile 3	FQDN / IPv4		sip show domainmp 3
ServiceDomainMP4	Primary SIP Service domain of profile 4	FQDN / IPv4		sip show domainmp 4
ServiceDomainBK1	Backup SIP Service domain	FQDN / IPv4		sip show domainbk 1

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
	of profile 1			
ServiceDomainBK2	Backup SIP Service domain of profile 2	FQDN / IPv4		sip show domainbk 2
ServiceDomainBK3	Backup SIP Service domain of profile 3	FQDN / IPv4		sip show domainbk 3
ServiceDomainBK4	Backup SIP Service domain of profile 4	FQDN / IPv4		sip show domainbk 4
SessionExpire	Session expire time	100 ~ 9999	1800	sip show ses_exp
SessionExpireMin	Minimum session expire that IPP would accept	100 ~ 1800	100	sip show min_ses
SessionMethod	Session Refresh Method	0:Invite 1:Update	0	sip show ses_method
SessionRefresher			0	sip show ses_refresher
SharedCallAppearance	Select Call Appearance mode	0: Disabled 1: Broadsoft SCA 2: Sylantro BLA	0	
sip_instance_id	Enable/disable sip.instance parameter	0: disabled 1: enabled	0	sip set sip_ins
SFOnSC	a field for Secretarial Filtering ON starcode	Max:32		sip show SecretarialFilteringOnSC
SFOffSC	a field for Secretarial Filtering OFF starcode	Max:32		sip show SecretarialFilteringOffSC
SFOnSV	To activate Secretarial Filtering for supervised line	Max:32		sip show SecretarialFilteringOnSV
SFOffSV	To deactivate Secretarial Filtering for supervised line	Max:32		sip show SecretarialFilteringOffSV
sip_portMP1	SIP Local Port for Primary Server-1	1025 ~49151	5060	sip show sip_pxy_portmp 1
sip_portMP2	SIP Local Port for Primary Server-2	1025 ~49151	5060	sip show sip_pxy_portmp 2
sip_portMP3	SIP Local Port for Primary Server-3	1025 ~49151	5060	sip show sip_pxy_portmp 3
sip_portMP4	SIP Local Port for Primary Server-4	1025 ~49151	5060	sip show sip_pxy_portmp 4
sip_portBK1	SIP Local Port for Backup Server-1	1025 ~49151	5060	sip show sip_pxy_portbk 1

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
sip_portBK2	SIP Local Port for Backup Server-2	1025 ~49151	5060	sip show sip_pxy_portbk 2
sip_portBK3	SIP Local Port for Backup Server-3	1025 ~49151	5060	sip show sip_pxy_portbk 3
sip_portBK4	SIP Local Port for Backup Server-4	1025 ~49151	5060	sip show sip_pxy_portbk 4
sip_reg_srv_portMP1	Register port for Primary Server-1	1025 ~49151	5060	sip show sip_reg_portmp 1
sip_reg_srv_portMP2	Register port for Primary Server-2	1025 ~49151	5060	sip show sip_reg_portmp 2
sip_reg_srv_portMP3	Register port for Primary Server-3	1025 ~49151	5060	sip show sip_reg_portmp 3
sip_reg_srv_portMP4	Register port for Primary Server-4	1025 ~49151	5060	sip show sip_reg_portmp 4
sip_reg_srv_portBK1	Register port for Backup Server-1	1025 ~49151	5060	sip show sip_reg_portbk 1
sip_reg_srv_portBK2	Register port for Backup Server-2	1025 ~49151	5060	sip show sip_reg_portbk 2
sip_reg_srv_portBK3	Register port for Backup Server-3	1025 ~49151	5060	sip show sip_reg_portbk 3
sip_reg_srv_portBK4	Register port for Backup Server-4	1025 ~49151	5060	sip show sip_reg_portbk 4
sip_pxy_srv_portMP1	Proxy port for Primary Server-1	1025 ~49151	5060	sip set sip_pxy_portmp 1 <1025 ~ 49151>
sip_pxy_srv_portMP2	Proxy port for Primary Server-2	1025 ~49151	5060	sip set sip_pxy_portmp 2 <1025 ~ 49151>
sip_pxy_srv_portMP3	Proxy port for Primary Server-3	1025 ~49151	5060	sip set sip_pxy_portmp 3 <1025 ~ 49151>
sip_pxy_srv_portMP4	Proxy port for Primary Server-4	1025 ~49151	5060	sip set sip_pxy_portmp 4 <1025 ~ 49151>
sip_pxy_srv_portBK1	Proxy port for Backup Server-1	1025 ~49151	5060	sip set sip_pxy_portbk 1 <1025 ~ 49151>
sip_pxy_srv_portBK2	Proxy port for Backup Server-2	1025 ~49151	5060	sip set sip_pxy_portbk 2 <1025 ~ 49151>
sip_pxy_srv_portBK3	Proxy port for Backup Server-3	1025 ~49151	5060	sip set sip_pxy_portbk 3 <1025 ~ 49151>
sip_pxy_srv_portBK4	Proxy port for Backup Server-4	1025 ~49151	5060	sip set sip_pxy_portbk 4 <1025 ~ 49151>
Specific_IP_flag	Enable/disable ip filtering for RTP streams	0: RTP accepted from negot port and any ip addr 1: RTP only accepted from negot ip	0	sip show Specific_IP_flag

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
SubscriptionExpire	Subscription expire time for MWI		3600	sip show sub_exp
SubscriptionExpireCB	Subscription expire time for CCBS		60	sip show sub_exp_cb
HeaderCompact	Enable/disable SIP messages using compact header		0	sip show hdr_compact
SubscribeDilaogBeforeLogin	For Login feature, Enable or disable Subscribe to dialog before registering to a new account	0: disable subscription 1: enable subscription (def)	1	sip set subdlgbflogin_flag <0 1>
subscribe_event	Enable or disable MWI function	0:disable 1:enable	0	sip show subscribe_event
sw_anon_reject	Anonymous Incoming call blocking	0:disable 2:enable	0	sip show sw anony_reject
sw_CF	Call Forward	0:disable 2:enable	0	sip show sw call_fwd
sw_CFA	Call Forward Always	0:disable 2:enable	0	sip show sw CFA
sw_CFNA	Call Forward No Answer	0:disable 2:enable	0	sip show sw CFNA
sw_CFB	Call Forward Busy	0:disable 2:enable	0	sip show sw CFB
sw_not_disturb	Do Not Disturb	0:disable 2:enable	0	sip show sw not_disturb
sw_call_park	Call Park function	0:disable 1:enable	0	sip set sw call_park (on/off)
sw_notify_autoprovision	Use SIP Notify to launch Autoprovision	1:activate 0:deactivate	0	sip show sw notify_autoprovision
sw_tr_vmail_address1	Voice Mail number-1	Max:24		sip set sw tr_vmail_addr 1 <address>
sw_tr_vmail_address2	Voice Mail number-2	Max:24		sip set sw tr_vmail_addr 2 <address>
sw_tr_vmail_address3	Voice Mail number-3	Max:24		sip set sw tr_vmail_addr 3 <address>
sw_tr_vmail_address4	Voice Mail number-4	Max:24		sip set sw tr_vmail_addr 4 <address>
sw_tr_vmail_flag	Enable or disable transfer to voice mail function	0:disable 2:enable	0	sip set sw tr_vmail_flag <profile> <on/off>

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
sw_park_srv_addr0	Reserved for future			N/A
TLSNoDisconTimeout	To decide if disconnect TLS with server when timeout	0: disable 1: enable	0	sip set TLS_NoDisconTimeout
TEL1Number	Telephone number of profile 1	Max:24		sip set tel_num 1 <Tel>
TEL2Number	Telephone number of profile 2	Max:24		sip set tel_num 2 <Tel>
TEL3Number	Telephone number of profile 3	Max:24		sip set tel_num 3 <Tel>
TEL4Number	Telephone number of profile 4	Max:24		sip set tel_num 4 <Tel>
TEL01Use	To activate the profile 1	0:deactivate 1.activate	1	sip set profile_used
TEL02Use	To activate the profile 2	0:deactivate 1.activate	0	sip set profile_used
TEL03Use	To activate the profile 3	0:deactivate 1.activate	0	sip set profile_used
TEL04Use	To activate the profile 4	0:deactivate 1.activate	0	sip set profile_used
TIAAlternativeCall	If the remote side has hold the call,don't send INVITE with sendonly to the remote side when switch to the another call	0: disable 1: enable	0	sip set TiAltCall
TransferUseContact	Populate Refer-to header with Contact or r-uri of 2 nd dialog	0: use r-ruri 1: use Contact	1	
TransferOnRingSC	a field for on ring transfer starcode	Max:32		sip show TransferOnRingSC
TransportFlgMP1	SIP over TCP/UDP/TLS-1	0:UDP 1:TCP 2:TLS	0	sip show transportmp 1
TransportFlgMP2	SIP over TCP/UDP/TLS-2	0:UDP 1:TCP 2:TLS	0	sip show transportmp 2
TransportFlgMP3	SIP over TCP/UDP/TLS-3	0:UDP 1:TCP 2:TLS	0	sip show transportmp 3
TransportFlgMP4	SIP over TCP/UDP/TLS-4	0:UDP 1:TCP 2:TLS	0	sip show transportmp 4

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
TransportFlgBK1	SIP over TCP/UDP/TLS for backup profile-1	0:UDP 1:TCP 2:TLS	0	sip show transportbk 1
TransportFlgBK2	SIP over TCP/UDP/TLS for backup profile-2	0:UDP 1:TCP 2:TLS	0	sip show transportbk 2
TransportFlgBK3	SIP over TCP/UDP/TLS for backup profile-3	0:UDP 1:TCP 2:TLS	0	sip show transportbk 3
TransportFlgBK4	SIP over TCP/UDP/TLS for backup profile-4	0:UDP 1:TCP 2:TLS	0	sip show transportbk 4
TrVoiceMailFlg1	local/starcode flag for transfer to voicemail-1	local sc	local	sip set TrVoiceMailFlg 1 (local sc)
TrVoiceMailFlg2	local/starcode flag for transfer to voicemail-2	local sc	local	sip set TrVoiceMailFlg 2 (local sc)
TrVoiceMailFlg3	local/starcode flag for transfer to voicemail-3	local sc	local	sip set TrVoiceMailFlg 3 (local sc)
TrVoiceMailFlg4	local/starcode flag for transfer to voicemail-4	local sc	local	sip set TrVoiceMailFlg 4 (local sc)
TrVoiceMailOnSC1	a field for transfer to voicemail ON starcode-1	Max:32		sip set TrVoiceMailOnSC 1 (starcode)
TrVoiceMailOnSC2	a field for transfer to voicemail ON starcode-2	Max:32		sip set TrVoiceMailOnSC 2 (starcode)
TrVoiceMailOnSC3	a field for transfer to voicemail ON starcode-3	Max:32		sip set TrVoiceMailOnSC 3 (starcode)
TrVoiceMailOnSC4	a field for transfer to voicemail ON starcode-4	Max:32		sip set TrVoiceMailOnSC 4 (starcode)
TrVoiceMailOffSC1	a field for transfer to voicemail OFF starcode-1	Max:32		sip set TrVoiceMailOffSC 1 (starcode)
TrVoiceMailOffSC2	a field for transfer to voicemail OFF starcode-2	Max:32		sip set TrVoiceMailOffSC 2 (starcode)
TrVoiceMailOffSC3	a field for transfer to voicemail OFF starcode-3	Max:32		sip set TrVoiceMailOffSC 3 (starcode)

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
TrVoiceMailOffSC4	a field for transfer to voicemail OFF starcode-4	Max:32		sip set TrVoiceMailOffSC 4 (starcode)
TrVoiceMailRingSC1	a field for transfer to voicemail on ringing starcode -1	Max:32		sip set TrVoiceMailRingSC 1 (starcode)
TrVoiceMailRingSC2	a field for transfer to voicemail on ringing starcode -2	Max:32		sip set TrVoiceMailRingSC 2 (starcode)
TrVoiceMailRingSC3	a field for transfer to voicemail on ringing starcode -3	Max:32		sip set TrVoiceMailRingSC 3 (starcode)
TrVoiceMailRingSC4	a field for transfer to voicemail on ringing starcode -4	Max:32		sip set TrVoiceMailRingSC 4 (starcode)
use_PrivateNumber	A flag to notify the end-user with a more legible number	0:Disable 1:Enable	0	sip show use_PrivateNbr_flag
UseContactInSubscribe	A flag to decide if use the Contact header field of the NOTIFY for subsequent SUBSCRIBE request-uri	0:Disable 1:Enable	0	sip show usecontactinsubscribe
USRPhoneFlg	Number Display	0:off 1:on	1	sip show user_phone
UnRegister_priorFlgMP1	Disable un-register before sending register message for Primary Server-1	0:disable 1:enable	1	sip show unreg_priormp 1
UnRegister_priorFlgMP2	Disable un-register before sending register message for Primary Server-2	0:disable 1:enable	1	sip show unreg_priormp 2
UnRegister_priorFlgMP3	Disable un-register before sending register message for Primary Server-3	0:disable 1:enable	1	sip show unreg_priormp 3

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
UnRegister_priorFlgMP4	Disable un-register before sending register message for Primary Server-4	0:disable 1:enable	1	sip show unreg_priormp 4
UnRegister_priorFlgBK1	Disable un-register before sending register message for Backup Server-1	0:disable 1:enable	1	sip show unreg_priorbk 1
UnRegister_priorFlgBK2	Disable un-register before sending register message for Backup Server-2	0:disable 1:enable	1	sip show unreg_priorbk 2
UnRegister_priorFlgBK3	Disable un-register before sending register message for Backup Server-3	0:disable 1:enable	1	sip show unreg_priorbk 3
UnRegister_priorFlgBK4	Disable un-register before sending register message for Backup Server-4	0:disable 1:enable	1	sip show unreg_priorbk 4
UnholdCodec	When unhold a call, phone should provide an offer with all codec it supports	0: negotiated codec only 1: all support codec	0	sip set UnholdCodec
VoiceTxGain	For system usage only		-3	N/A
VoiceRxGain	For system usage only		-3	N/A
VoiceTxGain5	For system usage only		-6	N/A
VoiceRxGain5	For system usage only		-6	N/A
VoiceMailAddr	Voice Mail Server Address	FQDN / IPv4		sip show vmail_addr
VoiceMailTelNum	Voice Mail Number	FQDN / IPv4		sip show vmail_telnum
VoiceMailPort	Voice Mail Server Port	1025~49151	5060	sip show vmail_port
URLTypeMP1	URL type for profile 1	0: sip 1: tel 2: sips	0	sip show url_typemp 1
URLTypeMP2	URL type for profile 2	0: sip 1: tel 2: sips	0	sip show url_typemp 2
URLTypeMP3	URL type for profile 3	0: sip 1: tel 2: sips	0	sip show url_typemp 3

[sip]				
File System Parameter	Explanation	Syntax	Value	CLI
URLTypeMP4	URL type for profile 4	0: sip 1: tel 2: sips	0	sip show url_typeemp 4
URLTypeBK1	URL type for backup profile 1	0: sip 1: tel 2: sips	0	sip show url_typebk 1
URLTypeBK2	URL type for backup profile 2	0: sip 1: tel 2: sips	0	sip show url_typebk 2
URLTypeBK3	URL type for backup profile 3	0: sip 1: tel 2: sips	0	sip show url_typebk 3
URLTypeBK4	URL type for backup profile 4	0: sip 1: tel 2: sips	0	sip show url_typebk 4

1.2.4. CWMP

[cwmp]				
File System Parameter	Explanation	Syntax	Value	CLI
CWMPFlag	Enable/disable cwmp TR069	R:read, W:write	0 disable 1 enable	cwmp set flag <on(1)/off(0)>
CWMPACS	ACS url	chars		cwmp set acs <ACS URL with transport protocol> (max 256 chars)
CWMPACSUser	ACS HTTP Authentication User Name	chars		cwmp set user <ACS HTTP Authentication User Name>
CWMPACSPassword	ACS HTTP Authentication Password	chars		cwmp set pwd <ACS HTTP Authentication Password>
CWMPConnReqUser	ACS's Connection-Request User Name	chars	Thomsontr069	cwmp set requester <ACS's Connection-Request User Name>
CWMPConnReqPassword	ACS's Connection-Request Password	chars	Thomsontr069	cwmp set reqpwd <ACS's Connection-Request Password>
CWMPPeriodicFlag	Send inform periodically	R:read, W:write	0 disable 1 enable	cwmp set pflag <on(1)/off(0)>
CWMPPeriodicInterval	Periodic interval	unassignInt	180	cwmp set interval <1: > (seconds)
Tr069HttpsCheckCA	ACS connection if need to check CA	R:read, W:write	0 not check CA, 1 check CA	cwmp set https_chk_ca <1/0> (0:no check CA,1:check CA)

TR111UDPCRANL	Limit time for Notify	R:read, W:write	0	Cwmp set udpcranl <UDPCConnectionRequest-AddressNotificationLimit>
TR111STUNEnable	Enable tr069 stun	R:read, W:write	0 disable 1 enable	cwmp set stunflag <STUN Enable> (0/1)
TR111STUNSrvAddr	Stun server IP address			cwmp set stunserver <STUNServerAddress>
TR111STUNSrvPort	Stun server port		3478	cwmp set stunport <STUNServerPort>
TR111STUNUName	Stun server user name	chars		cwmp set stunuser <STUNUsername>
TR111STUNpwd	Stun server pwd	chars	Thomson	cwmp set stunpwd <STUNPassword>
TR111STUNMaxKAP	Set the max stun keep alive timer		120	cwmp set stunmaxkap
TR111STUNMinKAP	Set the min stun keep alive timer		30	cwmp set stunminkap
KeepAliveMaximumDetect	set the period time for the next detect after complete the STUN keepalive detect		1800	cwmp set stunkeepalivemaxdetect
tr069_dl_tc	Download parameter for telephone config	chars	X 002030 TELEPHONECONFIG	N/A
tr069_dl_lt	Download parameter for language table	chars	X 002030 LANGUAGETABLE	N/A
tr069_dl_scf	Download parameter for security Configuration File		X 002030 SECURITYCOMMONCONFIG	N/A
tr069_dl_tt	Download parameter for tone table		X 002030 TONETABLE	N/A
tr069_dl_cwt	Download parameter for call waiting tone		X 002030 CALLWAITTONE	N/A
tr069_dl_m	Download parameter for melody		X 002030 MELODY	N/A

tr069_dl_sm	Download parameter for system melody		X 002030 SYSTEMMELODY	N/A
tr069_dl_shce	Download parameter for security sips cert		X 002030 SECURITYHTTPSCERT	N/A
tr069_dl_shca	Download parameter for security https ca		X 002030 SECURITYHTTPSCA	N/A
tr069_dl_shk	Download parameter for security https key		X 002030 SECURITYHTTPSKEY	N/A
tr069_dl_ssce	Download parameter for security sips cert		X 002030 SECURITYSIPSCERT	N/A
tr069_dl_ssca	Download parameter for security sips ca		X 002030 SECURITYSIPSCA	N/A
tr069_dl_ssk	Download parameter for security sips key		X 002030 SECURITYSIPSKEY	N/A
tr069_dl_pb	Download parameter for phone book		X 002030 PHONEBOOK	N/A

1.2.5. SNMP

[snmp]				
File System Parameter	Explanation	Syntax	Value	CLI
commRW1	SNMP community authority-1	R:read, W:write	0	snmp set comm1 <Community name> < read/write>
commRW2	SNMP community authority-2	R:read, W:write	0	snmp set comm2 <Community name> < read/write>
commRW3	SNMP community authority-3	R:read, W:write	0	snmp set comm3 <Community name> < read/write>
Flag	SNMP flag	0:disable, 1:enable	1	snmp set flag <0: Disable; 1: Enable>
Filter	SNMP manager filter	0: Filter All 1: Allow All 2: Limited	1	snmp set filter <0: Filter All/ 1: Allow All/ 2: Limited>

snmpManager1	SNMP manager-1		0.0.0.0	snmp set manager 1 <SNMP Manager IP>
snmpManager2	SNMP manager-2		0.0.0.0	snmp set manager 2 <SNMP Manager IP>
snmpManager3	SNMP manager-3		0.0.0.0	snmp set manager 3 <SNMP Manager IP>
snmpManager4	SNMP manager-4		0.0.0.0	snmp set manager 4 <SNMP Manager IP>
snmpManager5	SNMP manager-5		0.0.0.0	snmp set manager 5 <SNMP Manager IP>
sysTrapSrv	TRAP server address		10.1.29.170	snmp set trap <Trap Server IP>
sysCommName1	SNMP community name-1		public	snmp set comm1 <Community name> < read/write>
sysCommName2	SNMP community name-2			snmp set comm2 <Community name> < read/write>
sysCommName3	SNMP community name-3			snmp set comm3 <Community name> < read/write>
sysContact	The contact of the setting	chars	Thomson	
sysDescr	The description of the setting	chars	Thomson IP Phone	
sysLocation	The location of the setting	chars	France	
sysName	The name of the setting	chars	ST2030 SIP	
TrapLevel	Trap level	0 : Enable All SNMP Traps 1 : Enable Critical/Major/Minor SNMP Traps 2 : Enable Critical/Major SNMP Traps 3 : Enable Critical SNMP Traps 4 : Disable All SNMP Traps	1	snmp set level <0-4>

1.2.6. SYS

[sys]

File System Parameter	Explanation	Syntax	Value	CLI
-----------------------	-------------	--------	-------	-----

[sys]				
File System Parameter	Explanation	Syntax	Value	CLI
AEC	Diabie/Enable Acoustic Echo Cancellation	0:disable 1:enable	1	
BLFType	Type of BLF that is active	0: User-Oriented BLF is active 1: List-oriented BLF is active 2: presence BLF is active	0	sys set blf_type [0(User-oriented BLF), 1(List-oriented BLF), 2(Presence BLF)]
BLFListSipUri	URI of the List to subscribe in List-oriented BLF	L/<sip:user@d omain>	L/<sip:>	sys set blf_uri <uri_string>
BrandName	To change the brand name	string	Thomson	sys set brand_name
CodecAdaptivePlayout	Enable/disable adaptive jitter buffer per codec	0: Fixed length jitter buffer 1: Adaptive jitter buffer	g711a(1)g711mu(1)g729(1)g723(1)gsmwbamr(1)g722(1)l16(1)ilbc(1)ilbc133(1)	sys show adj_playout
CodecJitterBufMult	Number of packets in jitter buffer (min/nom/max) per codec	g711a(min/nom/max)g711mu(min/nom/max)g729(min/nom/max)g723(min/nom/max)gsmwbamr(min/nom/max)g722(min/nom/max)l16(min/nom/max)ilbc(min/nom/max)ilbc133(min/nom/max)	g711a(1/2/12)g711mu(1/2/12)g729(1/2/12)g723(1/2/4)gsmwbamr(1/2/6)g722(1/2/12)l16(1/2/12)ilbc(1/2/6)ilbc133(1/2/4)	sys show jitter_buf
CodecPktime	Packet size in msec per codec	g711a(size)g711mu(size)g729(size)g723(size)gsmwbamr(size)g722(size)l16(size)ilbc(size)ilbc133(size)	g711a(10)g711mu(10)g729(10)g723(30)gsmwbamr(20)g722(10)l16(10)ilbc(20)ilbc133(30)	
CodecPriority	Priority assigned to each codec	1~9 for each codec, 0 means disable g711a(pri)g711mu(pri)g729(pri)g723(pri)gsmwbamr(pri)g722(pri)l16(pri)ilbc(pri)ilbc133(pri)	g711a(1)g711mu(2)g729(3)g723(4)gsmwbamr(5)g722(6)l16(7)ilbc(8)ilbc133(9)	sip show codec_pri

[sys]				
File System Parameter	Explanation	Syntax	Value	CLI
CountryCode	Country Tone selection	US: United States FR: France GB: United Kingdom De: Germany NL: Netherlands IT: Italy ES: Spain CZ: Czech Rep. PL: Portugal SI: Slovenia AT: Austrian XX: UNITED STATES.	US	sys show country
config_sn	Serial number for Configuration file(MAC config file only)	12 digit fixed	200402190001	N/A
Current_Max_Multiline	Numbers of multilines that IPP can support	1 ~ 10	10	sys show max_mtline
Dialednum_timeout	Dial-out timeout	0:deactivate	4	sys set dialednum_timeout <sec>
DisableCWtone	Enable or disable Call Waiting tone	1:disable 0:enable	0	
dtmf_mode_flag	Switch dtmf mode	0:In Band 1:Out of Band(2833) 4:SIP INFO	1	N/A
ehs_ringer_period	Set up ehs ringer period	0 ~ 60 second	0	sys show ehs_ringer_period
EmergencyDialPlan	Set up Emergency Dial Plan		911 11x 1[2-8]	sys show emg_dialplan

[sys]				
File System Parameter	Explanation	Syntax	Value	CLI
FeatureKeyExt01 .. FeatureKeyExt82	Configure feature key as line key or supervision key for monitor extension	L: Line Key S: Supervision Key (Max:256 Supervision not applicable to ST2022) G: Sylantro Group Pickup R: Sylantro last number recall B: Sylantro BLA extension E:Extension Tekelec (not applicable to ST2022) D:DTMF V:Service U:Service Supervision A: Broadsoft SCA M: multi-registration	L/<sip:>	sys show fk 1 .. sys show fk 82
FeatureKeyOpt01 .. FeatureKeyOpt82	To decide the kind of use-oriented BLF	0:disable 1:enable(only ua-profile is enable, those service variable is available)	dialog(1)regDND(0)ua-profile(0:cfu(0)dnd(0)sf(0)hg(0))	For example(FeatureKeyOpt05=dialog(1)regDND(0)ua-profile(0:cfu(0)dnd(0)sf(0)hg(0))): sys set fk_blf_opt 5 1 0 0 sys set fk_blf_service 5 cfu(0)dnd(0)sf(0)hg(0)
FKExt01_sec .. FKExt82_sec	Configure feature key to speeddial as SIPS URI	1:ON 0:OFF	0	sys show fksec 1 .. sys show fksec 82

[sys]				
File System Parameter	Explanation	Syntax	Value	CLI
FeatureKeyLock	To lock some function keys	Max: 128	0	N/A
ModelName	To change the model name	string	TB30	sys set model_name
MGC_service	MGC Service function	0 : diable 1 : HW_pstn 2 : Cirpack MGC service	0	sys show mgc_service
Log_Decryption_Key	The key to decrypt the USB login/logout file	16 chars	Th0mson2\$8s8@9z!	sys set LoginDecKey
logINlogOUTmode	To decide which mode to do login/logout	0: current login/logout behavior 1: USB login/logout behavior	0	sys set LoginLogoutMode
Dial_Dtmf_Code	The code for making a new call	Any char	#5	sys set mgc_dial_code
Alternate_Dtmf_Code	The code for alternating call	Any char	#2	sys set mgc_alt_code
Rel_Libretre_Dtmf_Code	The code for liberating a call on hold or call waiting	Any char	#0	sys set mgc_rel_code
Ans_Libretre_Dtmf_Code	The code for retrieving the call on hold or call waiting	Any char	#1	sys set mgc_ans_code
Transfer_Dtmf_Code	The code for Transfer 2 calls	Any char	#4	sys set mgc_transf_code
Conference_Dtmf_Code	The code for establishing a conference	Any char	#3	sys set mgc_conf_code

[sys]				
File System Parameter	Explanation	Syntax	Value	CLI
NormalDigitFlag	Dialed number is sent when the user presses #	0:like "OK" 1:normal digit	1	sys show normaldigit
Packet_loss_cps	Diable/Enable Packet loss compensation	0:disable 1:enable	1	
PBXconfiguration	To indicate the phone is behind a PBX	0:no 1:yes	0	sys show PBXconfiguration
PBXprefix	To indicate the PBX prefix to access to the public network	1 digit		sys show PBXprefix
PCallLogURL	In Login/logout environment, url to download Call log file	http or https url		
PSettingURLdl	In Login/logout environment, url to download Personal Settings file	http or https url		
PSettingURLul	In Login/logout environment, url to upload Personal Settings file	http or https url		
RCallLogFlg	To decide use the local call log or remote call log	0:local 1:remote	0	
RCallLogURL	the URL used to download the the remote call log file	http or https url		
V_flag	The flag of Venezuela Numbering Plan	0: disable 1: enable	0	sys set V_flag
V_state_prefix	The state prefix of Venezuela Numbering	3 digits		sys set V_state_prefix

[sys]				
File System Parameter	Explanation	Syntax	Value	CLI
Phonebook1_url Phonebook2_url Phonebook3_url Phonebook4_url Phonebook5_url Phonebook6_url Phonebook7_url Phonebook8_url	Remote Phonebook URL	Max:255		sys set pb_url 1 [url] sys set pb_url 2 [url] sys set pb_url 3 [url] sys set pb_url 4 [url] sys set pb_url 5 [url] sys set pb_url 6 [url] sys set pb_url 7 [url] sys set pb_url 8 [url]
Phonebook1_name Phonebook2_name Phonebook3_name Phonebook4_name Phonebook5_name Phonebook6_name Phonebook7_name Phonebook8_name	Remote Phonebook Name (If Phonebook URL is present but phonebook name isn't, "Directory" will be the default.)	Max:18		sys set pb_name 1 [name] sys set pb_name 2 [name] sys set pb_name 3 [name] sys set pb_name 4 [name] sys set pb_name 5 [name] sys set pb_name 6 [name] sys set pb_name 7 [name] sys set pb_name 8 [name]
ServiceSupervisionFK	The position of the first FK for Service Supervision	Current_Max_Multiline +1 to the max number of available function keys Not applicable to ST2022	Current_Max_Multiline +1	sys show ServiceSupervision Start
ServiceSupOrder	The rank of the FK affected to this service	0~4 for each service, 0 stands for disable	callfwd(0)dnd(0)secFilter(0)huntgroup(0)	sys show ServiceSupervision Order
softkey01 softkey02 softkey03 softkey04 softkey05 softkey06 softkey07	Make possible to change the soft keys layout on the phone's screen (ST2030 only)	TrVoiceMail CallLog PickUp LockPhone VoiceMail RetrievePark DNDstate	softkey01=TrVoiceMail softkey02=CallLog softkey03=PickUp softkey04=LockPhone softkey05=VoiceMail softkey06=RetrievePark softkey07=DNDstate	

[sys]				
File System Parameter	Explanation	Syntax	Value	CLI
softkey08 softkey09 softkey10 softkey11 softkey12		ShortCut1 ShortCut2 ACDCheckIn ACDAvailable Login	softkey08=ShortCut1 softkey09=ShortCut2 softkey10=ACDCheckIn softkey11=ACDAvailable softkey12=Login	
StartSpareFK	First function key to be used for List-oriented BLF	Current_Max_Multiline +1 to the max number of available function keys Not applicable to ST2022	Current_Max_Multiline +1	
SuppressRTCP	Disable/enable RTCP sending	0:send RTCP 1:suppress RTCP	0	
SRTPLFlag	Disable/enable Secure outgoing calls	0: Disable 1: Enable	0	sys show srtp
TelnetID	ID for administrator mode	Max:31	administrator	sys show id
TelnetPWD	Password for administrator mode in Telnet	6 char(fixed length)	789234	sys show telpwd
UserID	ID for user mode	Max:31	user	sys show uid
UserPWD	Password for user mode	4 char fixed or blank		sys show upwd
VPNEscCode	To decide if enable VPN escape code	0: disable 1: enable	0	sys set VPNEscCode
VPNesp1 VPNesp82	The escape code for every function key	Max: 1		sys set VPNesp
VAD	Silence Suppression function	0: Disable 1: Enable	0	N/A
VOIPDialPlan	Set up VoIP Dial Plan			sip show voip_dialplan
WebPWD	Password for administrator mode in Web and MMI	6 char(fixed length)	784518	sys show pwd
2833_volume	"Volume" parameter for RFC2833 RTP Events	0~63	0	
WebGuiBlocked	A flag to decide if block the WEB GUI	0: disable 1: enable	0	sys set web_blocked
WebLogoDisplay	A flag to decide if display the customer LOGO	0: disable 1: enable	0	sys set WebLogoDisplay
webtimeout	A flag to decide if WebGui Session Timeout	120~3600(s)	120	sys set webtimeout

1.2.7. Auto Provision

[autoprovision]				
File System Parameter	Explanation	Syntax	Value	CLI
AutoprovisionFlag	Enable or disable autoprovision function	0:Off 1:On	1	autoprovision set flag
AutoprovisionHTTPServer	Autoprovision HTTP Server address	Max:256		autoprovision set HTTPserver 192.168.1.1
AutoprovisionTFTPServer	Autoprovision TFTP Server address	Max:256		autoprovision set TFTPserver 192.168.1.1
AutoprovisionFilename	For system usage only			
AutoprovisionTimeDays	IPP will perform autoprovision at this time period	0~255	0	autoprovision set nextchecktime 1 11:45 60
Autoprovisionstarttime	IPP will perform autoprovision at this time		11:45	
AutoprovisionTimeSpan	IPP will pick random time within this period to do autoprovision	0~255	0	
AutoprovisionRetryPeriod	APS retry period (sec)		30	autoprovision set retryperiod 30
AutoprovisionConfigname	INF name if option 67 is not present. Default is model name with MAC address with INF extension, TB30S_000E50112233.inf	Max:31		autoprovision set genfile name.inf
Decryption_Key	A Decryption Key used to decrypt com/mac file	Max:16	Th0mson2\$8s8@9z!	
NoUSBUpgrade	To indicate if block USB APS	0: not block 1: block	0	autoprovision set NoUSBUpgrade
USBAPSTimerout	USB mode do APS retry period (sec)		12	autoprovision set usbtimerout

1.2.8. QoS

[qos]				
File System Parameter	Explanation	Syntax	Value	CLI
DSCP1	Diffserv setting for Voice RTP	0~63	46	qos set dscp 1 46
DSCP2	Diffserv setting for Voice Signaling	0~63	40	qos set dscp 2 40
DSCP3	Diffserv setting for DHCP message	0~63	40	qos set dscp 3 40
TOS	Type of Service setting	0 ~ 255	160	qos set tos 160
VLANid1	VLAN ID for voice	1 ~ 4094	1	qos set vid voice 1
VLANid2	VLAN ID for data	1 ~ 4094	1	qos set vid data 1
VLANtag1	VLAN priority for RTP & signaling	0 ~ 7	6	qos set vtag voice 6
VLANtag2	Not used	0 ~ 7	6	Not used
VLANtagdata	VLAN Priority for data port incoming	0 ~ 7	6	qos set vtag data 6

1.2.9. NTP

[ntp]				
File System Parameter	Explanation	Syntax	Value	CLI
NtpDaylight	Daylight saving time	0:Off 1:On	1	ntp set dst 1
NTPFlag	Enable or disable NTP function	0:Off 1:On	1	ntp set flag 1
NtpIP	NTP server address			ntp set ip 192.168.1.1
NtpMode	Set NTP server from flash or network		0	ntp set mode 0
NtpSyncTime	NTP Recycle Time		1	ntp set sync_time 1
NtpZoneNum	Selected Time Zone on the web page	0~61	23	ntp set zonenum 49
NtpDLT	To decide the daylight saving time zone	x xxxxxxx xxxxxx		ntp set ntp_dlt

1.2.10. PPPoE

[pppoe]				
File System Parameter	Explanation	Syntax	Value	CLI
PPPoEID	ID for PPPoE connection	Max:64		pppoe set id

[pppoe]				
File System Parameter	Explanation	Syntax	Value	CLI
PPPoELCPMod	PPPoE LCP mode	0:disable 1:mode-1(60,60,60,60) 2:mode-2(60,5,5,5)	2	pppoe set lcpmode 2
PPPoELCPTimer	PPPoE LCP timer	60~600	60	pppoe set lcptime 60
PPPoEPWD	Password for PPPoE connection	Max:32		pppoe set pwd
PPPoEMTU	PPPoE MTU size	1440~1454	1454	pppoe set mtu 1454

1.2.11.STUN

[stun]				
File System Parameter	Explanation	Syntax	Value	CLI
STUNsRv	STUN server			stun set server
STUNPort	STUN port number		0	stun set port
STUNFlag	Enable STUN Server	0:disable 1:enable	0	stun set flag

1.2.12.UPnP

[upnp]				
File System Parameter	Explanation	Syntax	Value	CLI
UpnPFlag	UPnP Control Point	1:Off 3:Control Point	1	

1.2.13.Customer

[customer]				
File System Parameter	Explanation	Syntax	Value	CLI
sw_call_wait	Call Waiting	0:disable 1:enable	SG=1 SI=0	sip show sw call_wait

Appendix A: Option Menu Setting

Option Configure

- ☒ DialSubscribe
- ☒ CallBlocking
- ☒ CallForward
- ☒ CallWaiting
- ☒ AnonymBlock
- ☒ AutoAnswer
- ☒ AutoReject
- ☒ AutoStop
- ☒ AutoHangUp
- ☒ NumberDisplay
- ☒ DoNotDisturb
- ☒ PhoneLock
- ☒ PhoneAutoLock
- ☒ Reboot

The default value of "OptionVisible" is 0x3FFF. First this value will be converted into binary format. Therefore, it will be 111111111111, and we will add 2 Zeros in front for future use. The result will be 0011111111111111.

Bit	Option Menu	Syntax
1	Reserved for future use	
2	Reserved for future use	
3	Reboot	
4	PhoneAutoLock	
5	PhoneLock	
6	DoNotDisturb	
7	NumberDisplay	
8	AutoTurnOffSPK	
9	AutoStop	
10	AutoReject	0:disable 1:enable
11	AutoAnswer	
12	AnonymBlock	
13	CallWaiting	
14	CallForward	
15	CallBlocking	
16	DialSubscribe	

Appendix B: Time Zone List

NTP time zone parameter values for command “ntp set zonenum <0~63>”

Zone No.	Time Zone	Countries
0	(GMT-12:00)	Eniwetok, Kwajalein
1	(GMT-11:00)	Midway Island, Samoa
2	(GMT-10:00)	Hawaii
3	(GMT-09:00)	Alaska
4	(GMT-08:00)	Pacific Time(US & Canada); Tijuana
5	(GMT-07:00)	Arizona
6	(GMT-07:00)	Mountain Time(US & Canada)
7	(GMT-06:00)	Central Time(US & Canada)
8	(GMT-06:00)	Mexico City, Tegucigalpa
9	(GMT-06:00)	Central America, Mexico City, Saskatchewan
10	(GMT-05:00)	Bogota, Lima, Quito
11	(GMT-05:00)	Eastern Time(US & Canada)
12	(GMT-05:00)	Indiana(East)
13	(GMT-04:00)	Atlantic Time (Canada)
14	(GMT-04:00)	Caracas, La Paz
15	(GMT-03:30)	Newfoundland
16	(GMT-03:00)	Brasilia
17	(GMT-03:00)	Buenos Aires, Georgetown
18	(GMT-02:00)	Mid-Atlantic
19	(GMT-01:00)	Azores, Cape Verde Is.
20	(GMT)	Casablanca, Monrovia
21	(GMT)	Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London
22	(GMT+01:00)	Amsterdam, Copenhagen, Madrid, Paris, Vilnius
23	(GMT+01:00)	Central Europe Time(Belgrade, Sarajevo, Skopje, Sofija, Zagreb)
24	(GMT+01:00)	Bratislava, Budapest, Ljubljana, Prague, Warsaw
25	(GMT+01:00)	Brussels, Berlin, Bern, Rome, Stockholm, Vienna
26	(GMT+02:00)	Athens, Istanbul, Minsk
27	(GMT+02:00)	Bucharest
28	(GMT+02:00)	Cairo
29	(GMT+02:00)	Harare, Pretoria
30	(GMT+02:00)	Helsinki, Riga, Tallinn
31	(GMT+02:00)	Israel
32	(GMT+03:00)	Baghdad, Kuwait, Riyadh
33	(GMT+03:00)	Moscow, St. Petersburg, Volgograd
34	(GMT+03:00)	Nairobi
35	(GMT+03:30)	Tehran
36	(GMT+04:00)	Abu Dhabi, Muscat
37	(GMT+04:00)	Baku, Tbilisi
38	(GMT+04:30)	Kabul
39	(GMT+05:00)	Ekaterinburg
40	(GMT+05:00)	Islamabad, Karachi, Tashkent
41	(GMT+05:30)	Bombay, Calcutta, Madras, New Delhi
42	(GMT+05:45)	Kathmandu
43	(GMT+06:00)	Almaty, Dhaka
44	(GMT+06:00)	Colombo
45	(GMT+06:30)	Rangoon



46	(GMT+07:00)	Bangkok, Hanoi, Jakarta
47	(GMT+08:00)	Beijin, Chongqing, Hong Kong, Urumqi
48	(GMT+08:00)	Perth
49	(GMT+08:00)	Urumqi,Taipei, Kuala Lumpur, Sinapore
50	(GMT+09:00)	Osaka, Sappora, Tokyo
51	(GMT+09:00)	Seoul
52	(GMT+09:00)	Yakutsk
53	(GMT+09:30)	Adelaide
54	(GMT+09:30)	Darwin
55	(GMT+10:00)	Brisbane
56	(GMT+10:00)	Canberra, Melbourne, Sydney
57	(GMT+10:00)	Guam, Port Moresby
58	(GMT+10:00)	Hobart
59	(GMT+10:00)	Vladivostok
60	(GMT+11:00)	Magadan, Solomon Is., New Caledonia
61	(GMT+12:00)	Auckland, Wellington
62	(GMT+12:00)	Fiji, Kamchatka, Marshall Is.
63	(GMT+13:00)	Nuku'alofa

Appendix C: Language List

These are currently supported values for parameter LanguageType in section [ipp]

Value	Language
0	English
1	Francais
2	Español
3	Deutsch
4	Italiano
5	Norsk
6	Russian
7	Portugués
8	Nederlands
9	Extra downloadable language

Appendix D: Country Tone List

These are currently supported values for parameter CountryCode in section [sys]. Tones will be modified by this setting.

Value	Language
US	United States
FR	France
GB	United Kingdom
DE	Germany
NL	Netherlands
IT	Italy
ES	Spain
CZ	Czech Republic
PT	Portugal
SI	Eslovenia
XX	Extra downloadable tone table